


UTP – Ultrasound Test Points

A great way to ensure consistency for your data collection using the stethoscope module or the magnetic sensor.

The plate has the same diameter as the magnetic sensor and contains a center point to stabilize the stethoscope tip.

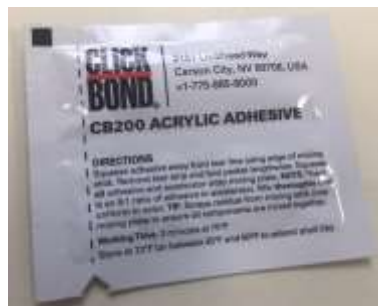

The plate should be installed as how you test with your Ultraprobe: directed at the heart of the bearing at a 90-degree angle for best results.



Package includes glue kits. 3 glue kits per 10 plates is provided.

Specifications

Height	6,23 mm
Diameter	17,45 mm
Temperature range adhesive	-55 Celsius to 121 Celsius
Cure time adhesive	30 mins for handling strength 2 hours at 90%, 24 hours full strength
Product code	UTP-10 for pack of 10 pieces UTP-100 for pack of 100 pieces

PLEASE FOLLOW THE CLICK BOND INSTRUCTIONS!

UE SYSTEMS EUROPE • WINDMOLEN 20, 7609NN ALMELO, NETHERLANDS

Telephone
+31-546-725125

Fax
+31-546-725126

email:
info@uesystems.eu

website:
www.uesystems.eu